



INSTRUCTION MANUAL

PERSONAL BLENDER WITH CHOPPER
(BW01C)





PERSONAL BLENDER WITH CHOPPER (BW01C)

**230V, 50HZ, 400W, 570ML & 240ML
POLYCARBONATE JARS, 600ML
CHOPPER BOWL, SIPPER CAP**

HOUSEHOLD USE ONLY

IDENTIFICATION OF PARTS



USER INSTRUCTIONS

Please read these instructions carefully before using the product and retain them for future reference.

- Ensure that the appliance's voltage matches the local power supply before connecting it.
- Do not operate the appliance if the power cord, plug, or any other part is damaged.
- If the power cord is damaged, it must be replaced by the manufacturer, an authorized service agent, or a qualified professional to avoid hazards.
- Never immerse the motor unit in water or any other liquid, nor should it be rinsed under running water. Use only a damp cloth to clean the motor unit.
- Allow hot ingredients to cool down before chopping them (maximum temperature 60°C/175°F).
- Cut larger ingredients into pieces of around 2 cm before blending.
- If the blade unit gets stuck, disconnect the motor and remove the lid to clear the blockage using a spatula.
- Handle the blades with care to avoid injury as they are very sharp.
- Wait for the blades to stop completely before removing the lid.
- Do not operate the appliance without ingredients.
- This appliance is for household use only.
- This appliance is not suitable for children, without parental supervision.


BLENDER FUNCTION

1. Place the blending jar on a flat surface and open the blade base.
2. Add your ingredients, ensuring they do not exceed the jar's maximum fill line.
3. Attach the blade base to the open end of the blending jar.
4. Turn the jar upside down, place it on the blender base, and ensure the three micro-switch blocks are aligned correctly.
5. Press the center button to start the machine. Release the button to stop.
6. Detach the jar from the base.
7. Turn the blending jar right side up, place it on a flat surface, remove the blade base, and close it with the supper lid.

GRINDER FUNCTION

1. Open the grinder blade base.
2. Only add dry ingredients; wet foods are not suitable for grinding.
3. Secure the grinder blade (2 leaf).
4. Attach the blade base to the open end of the grinding jar.
5. Turn the jar upside down, place it on the blender base, and ensure the three micro-switch blocks are aligned correctly.
6. Press the button to start the machine.
7. Do not operate for more than 45 seconds in a single use.

USE OF CHOPPER

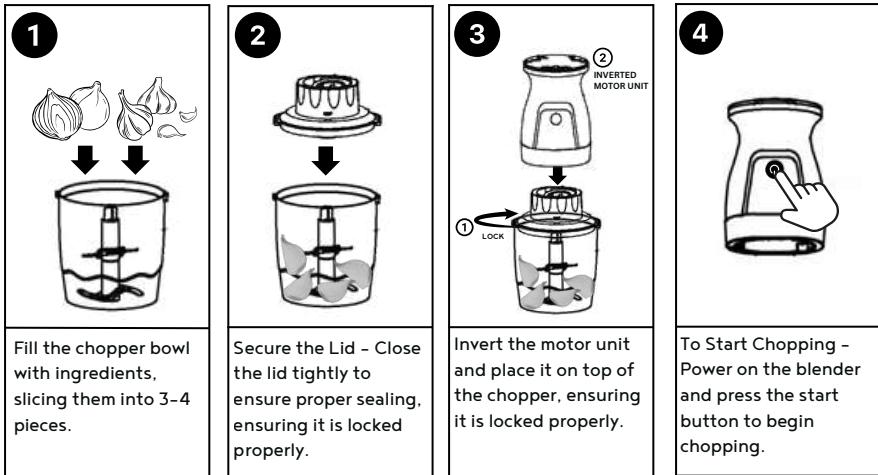

Once the chopping is complete, turn off the blender, unlock it, and remove the blender body from the chopper.

NEW FEATURE

Temperature Overload Protector (TOP)

- Use the appliance for a maximum of 1 minute continuously, then allow a 1-minute break to prevent overheating.
- If used beyond the recommended time, the Temperature Overload Protector (TOP) will automatically shut off the motor to prevent overheating.
- The motor will resume normal operation after a cooldown period of 20-30 minutes.

USAGE GUIDELINES

- Only the jar, blade base and sipper lid are dishwasher safe; other parts are not.
- For best results, the blender can crush ice with its well-designed blades, but don't **overfill** the jar with ice.
- When blending, always include water or another liquid. Cut fruits into small pieces beforehand.

CLEANING INSTRUCTIONS

- Avoid using abrasive cleaners, scouring pads, or alcohol to clean the appliance.
- Do not immerse the motor unit in water or place it in a dishwasher.
- Unplug the appliance and disassemble it. For deeper cleaning, remove the sealing ring and non-slip ring.
- Wash the bowl, lid, blade unit, sealing ring, and non-slip ring in warm water with dish soap.
- Wipe the motor unit with a damp cloth.

TROUBLESHOOTING

If the appliance fails to work, check the following:

- Ensure it is properly connected to a power source.
- Confirm that the jar or chopper is securely locked onto the blender base.
- Make sure the locking mechanisms are properly engaged.
- If the appliance still does not function, contact an authorized service center or the manufacturer for assistance.

WARRANTY REGISTRATION

Product Name:

Personal Blender With Chopper

Model Number:

BW01C

Product Serial No. :



**TO REGISTER YOUR
WARRANTY**



SCAN HERE



Follow US on:

Instagram: @blendwelindia | Website: www.blendwel.com

Taatva Appliances, No.830, 5th A Cross, 9th Main, HRBR Layout, Kalyan Nagar, Bangalore - 560043, Karnataka, India

TO REGISTER YOUR
WARRANTY

